

STAIR KITS

**SHAPED, REBATED
& PRE-DRILLED**

**QUICK & EASY
INSTALL < 30 MINS**

BUILT TO LAST



TOTAL WIDTH 970 mm

- I.e. 900mm Treads + 45mm Stringers (x2) - 10mm Rebates (x2) -

WHATS INCLUDED?



Premium Grade Treated
Pine Stringers & Treads F7
LOSP H3.

150mm Bugle Head Screws

Threaded Rod
(5+ Treads as required)

+ Step-by-Step Instructions

WHAT TOOLS DO I NEED?

- Screw Gun / Drill
- 5mm Hex Head Drill Bit
- Paint / Oil / Sealer
to finish


When working with treated timber we recommend using safety equipment; gloves, safety goggles and dusk mask.

STANDARD SIZES

NO. OF TREADS	TOTAL RISE (mm)	TOTAL RUN (mm)
1 Tread	330	310
2 Tread	495	550
3 Tread	660	790
4 Tread	825	1030
5 Tread	990	1270
6 Tread	1155	1510
7 Tread	1320	1750
8 Tread	1485	1990
9 Tread	1650	2230
10 Tread	1815	2470
11 Tread	1980	2710
12 Tread	2145	2950
13 Tread	2310	3190
14 Tread	2475	3430
15 Tread	2640	3670

CUSTOM SIZE

Note: Kits custom made to size & specification are usually manufactured within 48 Hours of order. Customised kits will typically attract a higher charge compared to standard sizes. We will check your measurements against the building code and advise of any changes.

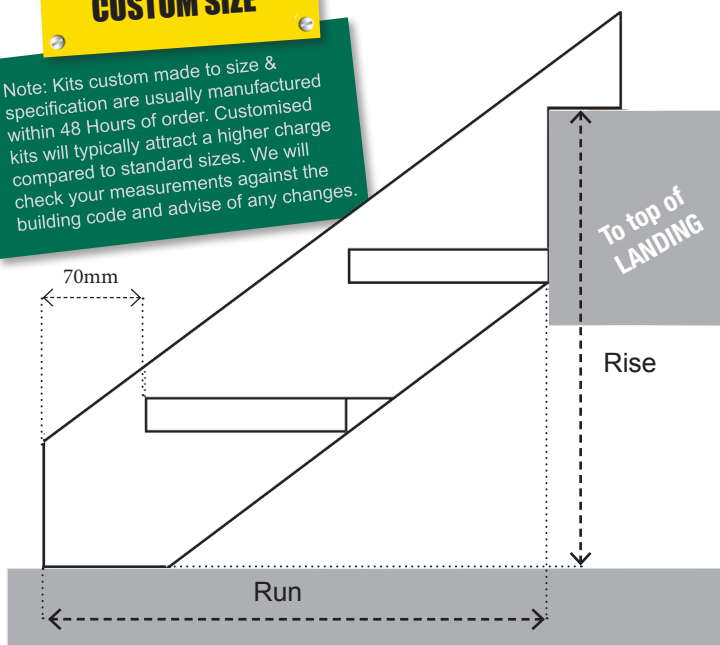

Made With

**SOUTHERN
SELECT**

1 WHAT TOTAL RISE? mm

2 WHAT TOTAL WIDTH? mm

3 Comments (I.e. Maximum run? Pre-Oiled? etc)

Name

Contact

COMPLETE & RETURN FOR AN OBLIGATION FREE QUOTE